



Dynamo Hockey V7.01 Program Configuration

To change the default values

User should hold down the ACCESS button, the scoring display will count down from five and display the letters PE (Parameter Entry)

Release the ACCESS button after the countdown and the menu system has been accessed

Change values for each setting using the "VALUE" button. Press the "ACCESS" button to move to the next configurable setting. When all configurable values have been set, the program exits the setup routine and the values have been stored.

- **SC** **Maximum score (for a player) per game**
 - Default Value 7
 - Minimum Value 2
 - Maximum Value 9

- **LE** **Maximum time in minutes a game will run**
 - Default Value 7 minutes
 - Minimum Value 0 (time off, score setting determines game length)
 - Maximum Value 16 minutes

- **CC** **Coins per credit**
 - Default Value 1
 - Minimum Value 1
 - Maximum Value 8

- **PC** **Plays per credit**
 - Default Value 1
 - Minimum Value 1
 - Maximum Value 3

To Set Software Defaults

User should hold down the VALUE button in the PC Board when powering up the game. The LED display flashes "FP" (Factory Parameters) when the system defaults have been set. After "FP" has flashed, the display continues into startup mode. At this point you are done setting the defaults.